M73-APO01-700

Installation

Install the Driver & Utility

Note: Always remember to install the Driver & Utility before you plug USB cable into the PC's USB port.

In Windows 98SE/ME

For Windows 98SE users: As you perform the installation, have your system operating CD-ROM at hand. You may be asked to insert the OS CD-ROM for the system to download a specific driver.

1. Insert the supplied **CD-ROM** into the CD-ROM drive. Double click on **Setup.exe** to install the **Wireless LAN Driver & Utility**.
2. In the **Welcome** screen, click **Next**.
3. Click **Next**; Windows will copy all the necessary files to your system.
4. When Windows prompts you to restart your computer, select **Yes** and click **OK**.

Downloaded from www.Manualslib.com manuals search engine

In Windows 2000

1. In the **Welcome** screen, click **Next**.
2. Click **Next**; Windows will copy all the necessary files to your system.
3. In the **Digital Signature Not Found** window, click **Yes** to continue.
4. Restart your computer.

In Windows XP

1. In the **Welcome** screen, click **Next**.
2. Click **Next**; Windows will copy all the necessary files to your system.
3. Click **Continue Anyway** to proceed.

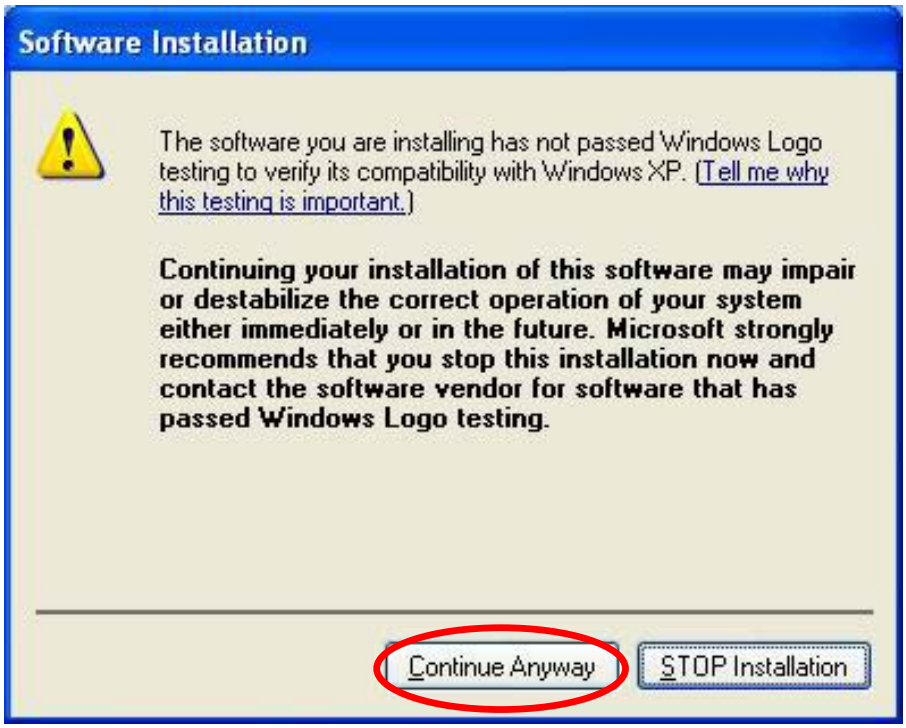
Software Installation
The software you are installing has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the software vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Downloaded from www.Manualslib.com manuals search engine

Install the Device

1. Plug the square end (**Type B)** of USB cable into the adapter's USB port.
2. Plug the rectangle end (**Type A**) of USB cable into the PC's USB port
3. After installing the Wireless USB Adapter, Windows will automatically detect the new device. Follow the on-screen instruction to install.

Note for Windows 2000 users:

During the installation, when the "**Digital Signature Not Found"** screen appears, click "**Yes"** to continue.

Note for Windows XP users:

During the installation, when Windows prompt you that this hardware has not passed Windows Logo testing…, click **Continue Anyway.**

In Windows 98SE

1. Windows will auto-detect the 802.11b USB Adapter and a **"New Hardware Found"** window will show up.

Downloaded from www.Manualslib.com manuals search engine

2. Once the **"Please insert the disk labeled 'Windows 98 Second Edition CD-ROM' , and then click OK"** window appears, click **OK**.

3. Select the correct drive and click **OK**.

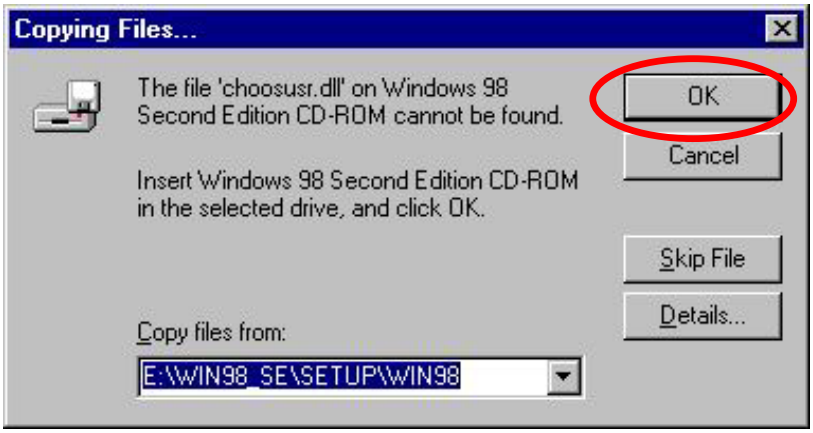
Copying Files...
The file 'choosusr.dll' on Windows 98 Second Edition CD-ROM cannot be found.
Insert Windows 98 Second Edition CD-ROM in the selected drive, and click OK.
OK
Cancel
Skip File
Details...
Copy files from:
E:\WIN98_SE\SETUP\WIN98

4. Windows will copy all the necessary files to your system.

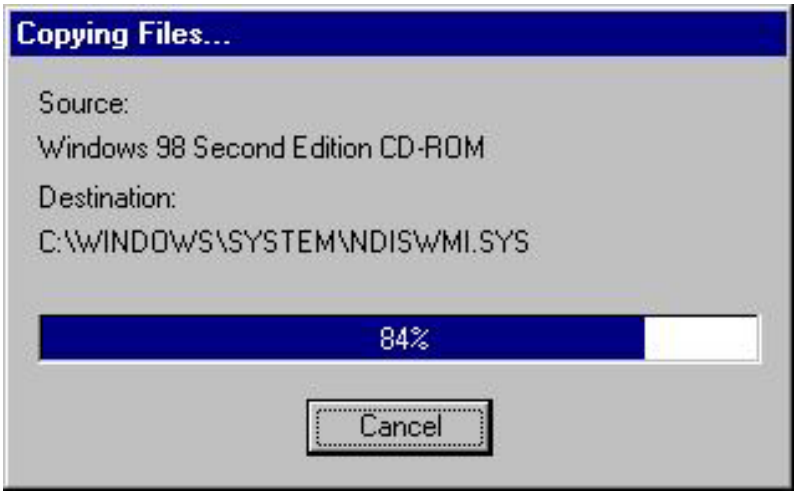

Downloaded from www.Manualslib.com manuals search engine

5. Windows will auto-detect the 802.11b USB Adapter promptly as the icon showed below.

In Windows ME

1. Windows will auto-detect the 802.11b USB Adapter and a **"New Hardware Found"** window will show up.

2. Windows will auto-detect the 802.11b USB Adapter promptly as the icon showed below.

Downloaded from www.Manualslib.com manuals search engine

In Windows 2000

1. In **Digital Signature Not Found** window, click **Yes** to continue.

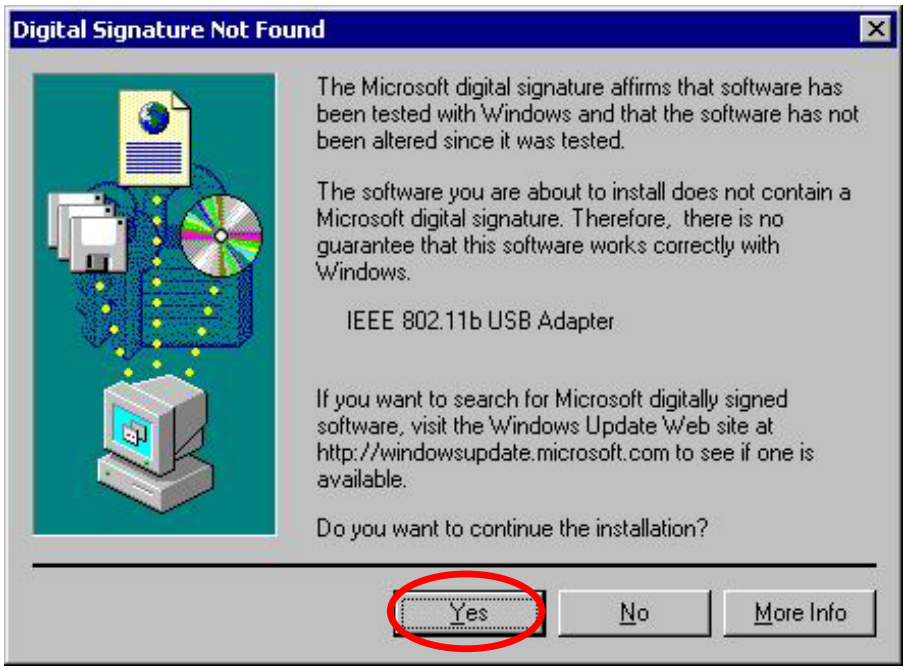
Digital Signature Not Found
The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested.
The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows.
IEEE 802.11b USB Adapter
If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available.
Do you want to continue the installation?
Yes
No
More Info

2. Windows will auto-detect the 802.11b USB Adapter promptly as the icon showed below.

In Windows XP

1. Windows will auto-detect the 802.11b USB Adapter and a **"Found New Hardware Wizard"** window will show up. Select "**Install the software automatically (recommended)**". Click **Next** to continue.

Downloaded from www.Manualslib.com manuals search engine

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
IEEE 802.11b USB Adapter
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

2. Wait and the **Wizard** will search for the 802.11b USB Adapter.

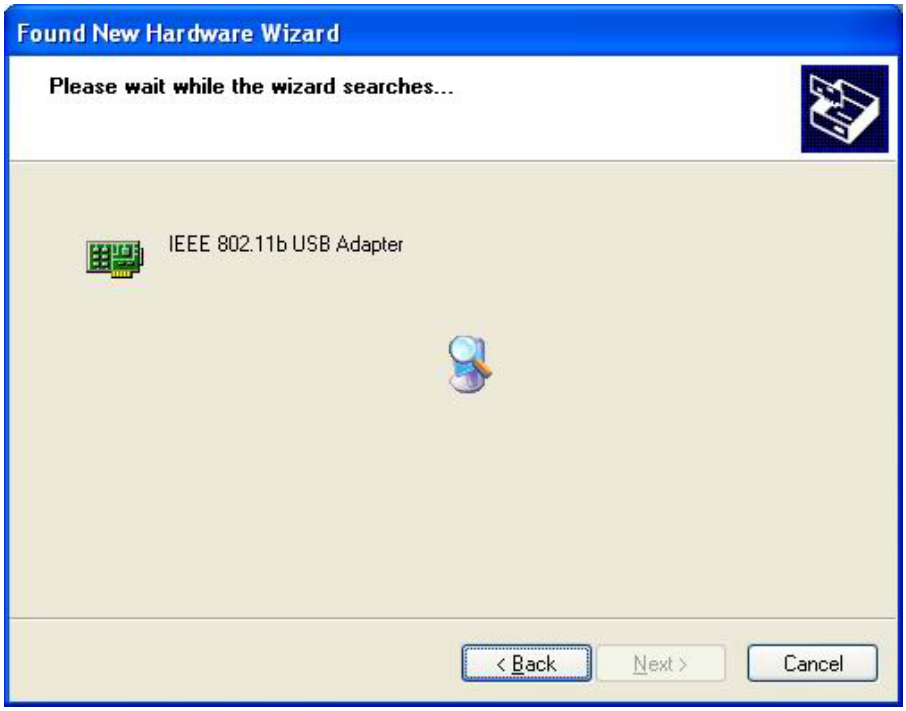

3. Click **Continue Anyway** to proceed.

Downloaded from www.Manualslib.com manuals search engine

Hardware Installation
The software you are installing for this hardware:
IEEE 802.11b USB Adapter
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

4. Click **Next**; Windows will copy all the necessary files to your system.

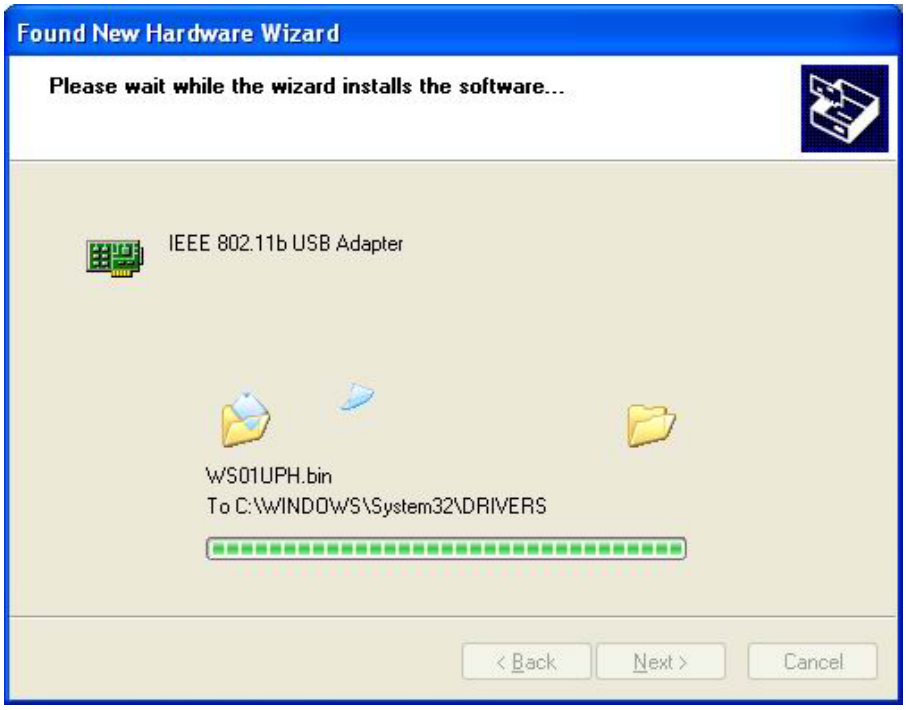

5. Click **Finish** to complete the installation.

Downloaded from www.Manualslib.com manuals search engine

Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
IEEE 802.11b USB Adapter
Click Finish to close the wizard.
< Back
Finish
Cancel

6. Windows will auto-detect the 802.11b USB Adapter promptly as the icon showed below.

Configuration

Once the driver and utility has been installed, and the device is properly connected to your computer, you can now start using this device with the default settings. However, if you'd like to change settings in the utility, you can refer to user manual saved in the CD-ROM for the corresponding section to perform more advanced configuration.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

USB Flash Disk (Optional)

Install Driver

Windows 98/98SE – Install from CD ROM

In Windows 98/98SE, you will need to install the driver found on the CD that comes with this device.

Run **Flash Driver.exe.**

1. Follow the on-screen instructions to proceed.

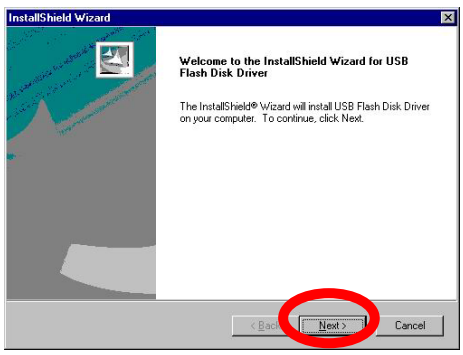
InstallShield Wizard
Welcome to the InstallShield Wizard for USB Flash Disk Driver
The InstallShield® Wizard will install USB Flash Disk Driver on your computer. To continue, click Next.
< Back
Next >
Cancel

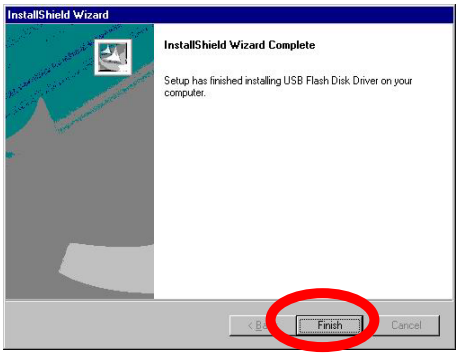

2. Click **Finish** to complete the installation.
3. After the installing process is finished, remove the cap from your USB Flash Dish and plug the USB connector to the USB port on your computer.

Downloaded from www.Manualslib.com manuals search engine

4. Open **My Computer** and you will see a newly added icon; shown on the screen as a removable disk drive.

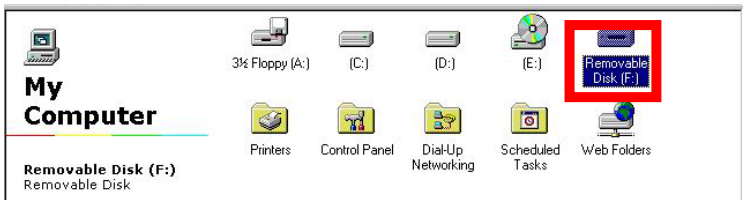

Windows ME/2000/XP-No Driver is Required

This device is Plug and Play compliant, therefore, once you plug it into your Window's based system, your system will automatically detect it as a removable hard disk. You can go to **My Computer** to check if there is a newly added icon. If yes, it is ready for use. If not, you may have to check if the USB Flash Disk is connected properly to your USB port.

Removing your USB Flash Disk

***Warning**: Each time you remove the USB Flash Disk from your computer, be sure to use the Unplug/Eject icon* *on the taskbar to avoid data loss or damage to your Flash Disk.*

Downloaded from www.Manualslib.com manuals search engine

Manage your USB Flash Disk

Main Menu

1. Load the included CD and open it. Double-click **MYKEY**.

2. An USB Flash Disk icon will appear on your desktop

, a Star icon will also appear on the bottom right corner of the task bar on your screen. 

.
3. Right-click the

icon.
4. Click **Option.** The **USB Flash Disk Utility**

will appear.
5. The USB Flash Disk Utility consists of four tabs for management. See the following for details as how to use and manage this device.

Downloaded from www.Manualslib.com manuals search engine

Disk Manager

Disk Manager is readable only. On this box, you will know the used/free capacity of your flash disk.

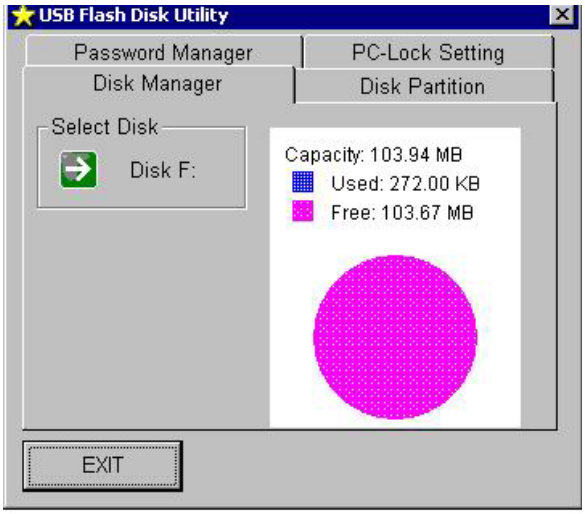

Disk Partition

In this box, you can divide the USB Flash Disk into two partitions:

Un-protected Disk Space: all data located here is accessible to anyone who uses your computer or Flash Disk. When logging out of the protected area you are automatically redirected to the Un-protected Disk area.

Protected Disk Space: this area is password protected.

1. Drag the pointer to adjust the capacity of the Protected/Un-protected disk.

Downloaded from www.Manualslib.com manuals search engine

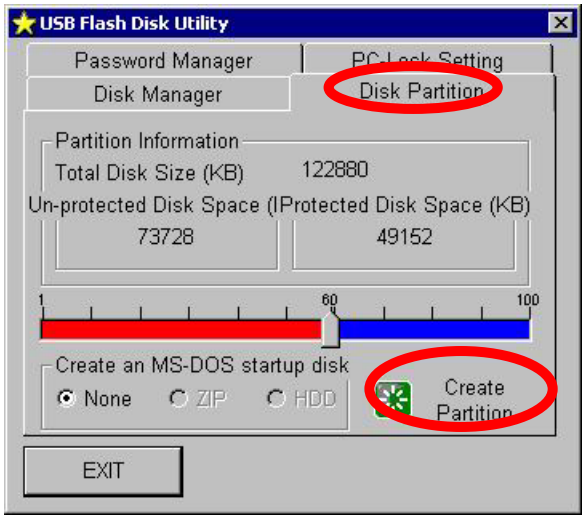

2. Press **Create Partition**.
3. A warning message appears to advise that all data on the disk will be erased. You can cancel this action by clicking **Cancel**. Or click **OK** to continue.

4. Click **Cancel** to copy your data to a Hard Disk before creating your prtition. Click **OK** to create your partition. Any and all Data stored on your Flash Disk will be destroyed.

Downloaded from www.Manualslib.com manuals search engine

Switch between Protected and Un-protected Disks

Enter the Protected Disk

1. Right click

. Select **Login**

.

2. You are prompted to enter your password. The default password is **0000**. It is suggested that you set your own password. If you forget your password, press ▶to get see your password hint.

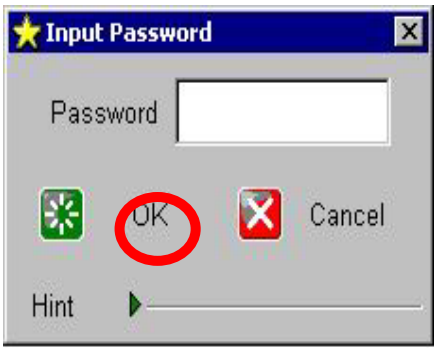

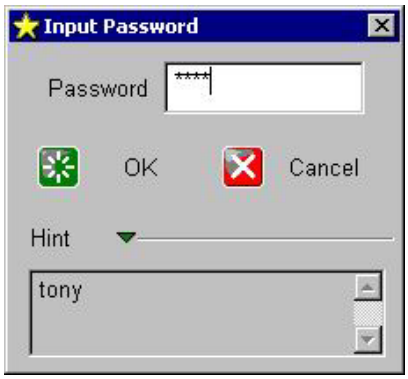

Downloaded from www.Manualslib.com manuals search engine

Once you enter the protected disk, the disk icon shown in **My Computer** will change from

to

, and vise versa.

Enter the Un-protected Disk

1. Right click

. Select **Logout** to enter the **Un-protected Disk**.

Password Manager

Password can be changed in this box. You can also set a password hint for use if you forget your password. Default password is set to: 0000

Downloaded from www.Manualslib.com manuals search engine

Change Password

1. Enter the "**Old Password**", the default is "**0000**".
2. Enter the "**New Password**". (Maximum 4 characters long – use letters or numbers)
3. Confirm password by re-entering the new password.
4. Enter a hint of your own; this will be helpful to remind you if you forget your password.
5. Press **Change** to continue.
6. **Password has been changed** message appears. Click **OK**.

Password Hint

- You can leave the Password Hint blank if you don't want to use it.

PC LOCK

Once **PC-Lock** is enabled, the PC you are presently using is locked. To unlock this PC, you can only use this USB Flash Disk.

To enable PC Lock, there are two conditions for your choice,

Downloaded from www.Manualslib.com manuals search engine

Plug-in USB Flash Disk

This means that you have to plug this USB Flash Disk into your computer's USB port in order to open your PC;

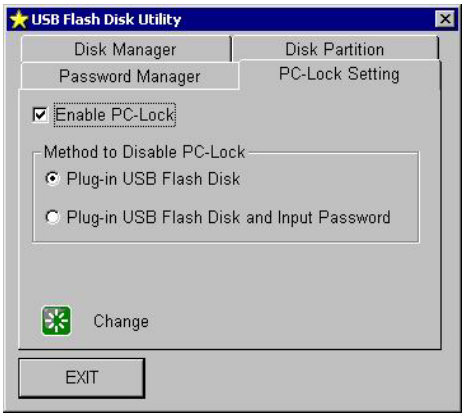

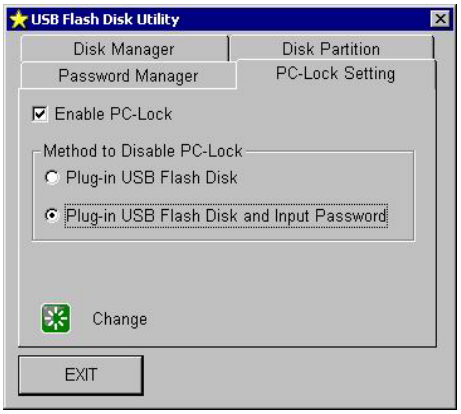

Plug-in USB Flash Disk and Input Password

This means to open the PC, you are required not only to plug the USB Flash Disk, but also have to enter your password.

To lock a PC

1. Right click

.
2. Select **Option →PC-Lock Setting.**
3. Check **Enable PC-Lock**.

Downloaded from www.Manualslib.com manuals search engine

4. Select the Unlock Condition that fits your needs.
5. Press **Change**.
6. Press **Exit**.
7. Return to your desktop and right click

again.
8. Move the cursor to **PC Lock** 

You PC is now locked.
9. If this function is enabled, your PC will not respond unless this USB Flash Disk is plugged in.

To unlock a PC

1. Plug the USB Flash Disk into the locked PC.
2. If the unlock condition is set to **Plug-in USB Flash Disk and Input Password,** a password box will pop up**.** 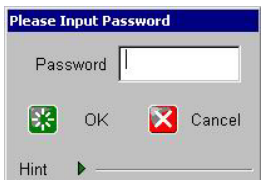

3. Enter your password. The PC is now unlocked.

Downloaded from www.Manualslib.com manuals search engine